



Operating Instructions

ebm-papst A&NZ Pty Ltd

10 Oxford Road Laverton North VIC 3026 Australia

Phone: +61 3 9360 6400 Fax: +61 3 9360 6464 sales@ebmpapst.com.au www.ebmpapst.com.au

CONTENTS

1.	SAFETY REGULATIONS AND NOTES	
2.	TECHNICAL DATA	2
2.1	Product drawing	2
22	Ancillary component data	2

1. SAFETY REGULATIONS AND NOTES

Please read these operating instructions carefully before starting to work with the device. Observe the following warnings to prevent malfunctions or physical damage to both property and people.

Product W2E200-CH38-01 is assembled in Australia and incorporates imported product A2E200AK3801. For product drawing see Chapter 2.1 'Product drawing' of this document and Chapter 2.2 'Ancillary component data' for specifications of sub components.

For safety regulations and information, intended use, technical data, connection and start-up and maintenance, malfunctions, possible causes and remedies refer to operating instructions of A2E200AK3801.

These operating instructions are to be regarded as part of this device. If the device is sold or transferred, the operating instructions must accompany it.

These operating instructions may be duplicated and forwarded for information about potential dangers and their prevention.







Operating Instructions

2. TECHNICAL DATA

2.1 Product drawing

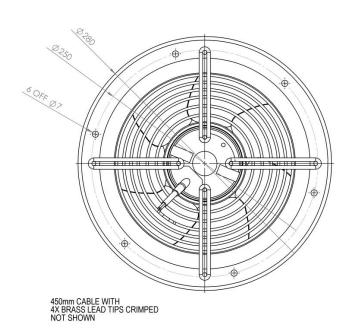

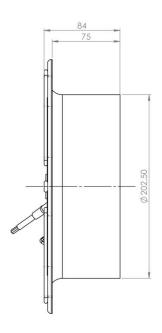

AIRFLOW DIRECTION ←

All dimensions are in mm

Direction of air flow "V"

Cable

Customer end stripped 85 mm 4x brass lead tips crimpped at 6mm long.

2.2 Ancillary component data

Weight [kg]	2.30 kg
Material of guard grille	Steel phosphate and coated in
	black
Material of wall ring	Sheet steel pre-galvanised and
_	coated in black plastic
Capacitor	1.5µF, S0

 Item no. LS-094.
 Revision 002
 Release 08/04/2019
 Page 2 of 2